


**IMPORTANT:**  
Go to [www.extron.com](http://www.extron.com) for the complete user guide, installation instructions, and specifications before connecting the product to the power source.

## HDP 101 4K • Setup Guide

The Extron HDP 101 4K is a compact, active HDMI to DisplayPort converter for signals up to 4K 30 Hz @ 4:4:4, providing connectivity between HDMI sources and DisplayPort displays and peripherals. Follow these instructions to install the HDP 101 4K.


### Cabling

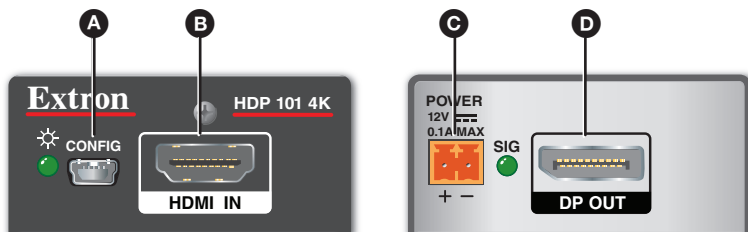

- A Config port** – Connect a host computer to this USB port to configure the HDP 101 4K.

**NOTE:** Use Product Configuration Software (PCS) or Simple Instruction Set™ (SIS™) commands in DataViewer to configure EDID Minder®, adjust the format and video color bit depth, and monitor the signal status (see the *HDP 101 4K User Guide* at [www.extron.com](http://www.extron.com)).

- B HDMI input** – Connect an HDMI source device to the HDMI input.
- C Power inlet** – Wire the power supply as shown below and connect it to the power inlet.

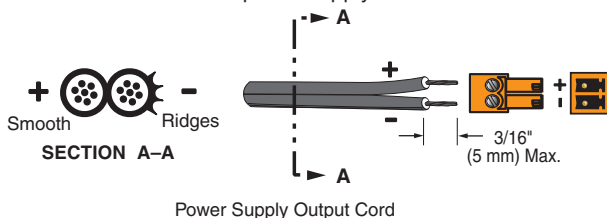


### ATTENTION:

- Do not connect any external power supplies until you have read the Attention notifications in the Power Supply section of the *HDP 101 4K User Guide*.
- Ne branchez pas de sources d'alimentation externes avant d'avoir lu les mises en garde dans la section « Power Supply » du guide *HDP 101 4K* utilisateur.

- D DP output** – Connect a DisplayPort output device to the DP output.

### LED Indicators

- A Power/signal LED** – Lights amber to indicate power, and lights green to indicate HDMI signal presence.
- B Output signal LED** (rear panel) – Lights to indicate signal presence on the DisplayPort output.

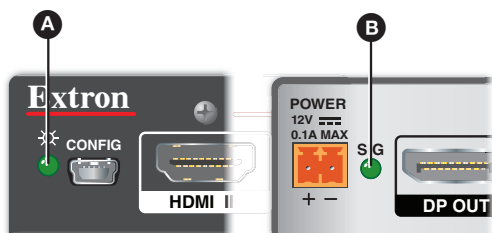


# HDP 101 4K• Setup Guide (Continued)

## Mounting

Use the included hook-and-loop tape to attach the HDP 101 4K to the application surface.

## Application Diagram

The following is a typical application diagram for the HDP 101 4K.

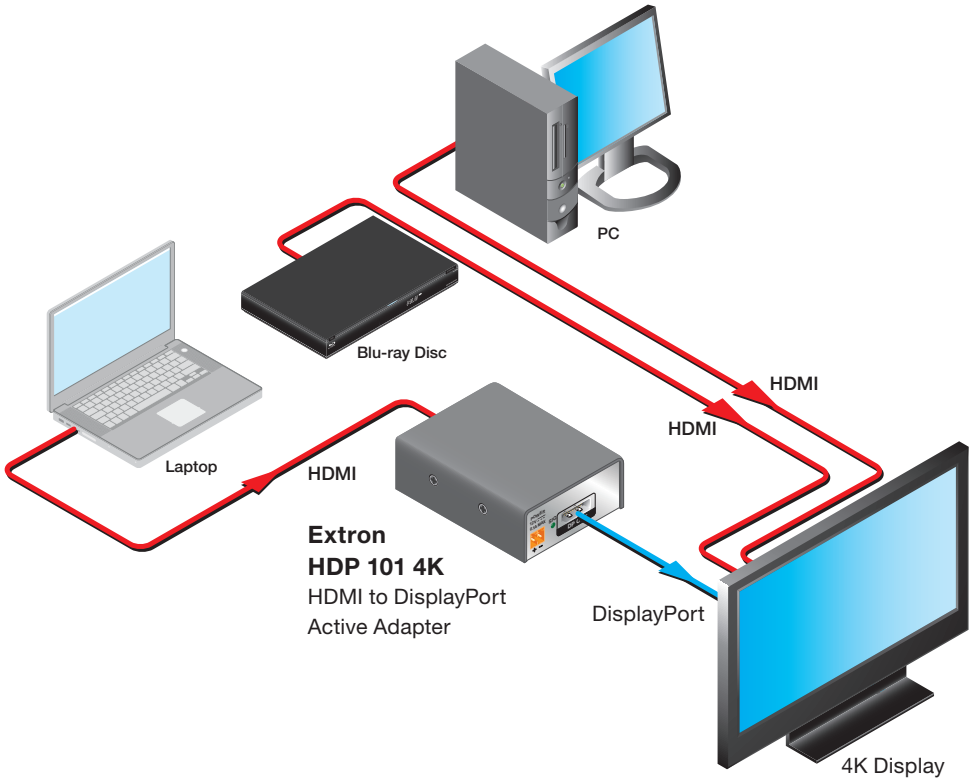

<b>Extron USA Headquarters</b> +1.800.633.9876 (Inside USA/Canada Only)		<b>Extron Europe</b> +800.3987.6673 (Inside Europe Only) +31.33.453.4040 +31.33.453.4050 FAX	<b>Extron India</b> 1800.3070.3777 (Inside India Only) +91.80.3055.3777 +91.80.3055.3737 FAX
<b>Extron USA - West</b> +1.714.491.1500 +1.714.491.1517 FAX	<b>Extron USA - East</b> +1.919.850.1000 +1.919.850.1001 FAX	<b>Extron Japan</b> +81.3.3511.7655 +81.3.3511.7656 FAX	<b>Extron China</b> +86.21.3760.1568 +86.21.3760.1566 FAX
<b>Extron Asia</b> +65.6383.4400 +65.6383.4664 FAX	<b>Extron Middle East</b> +971.4.299.1800 +971.4.299.1880 FAX	<b>Extron Australia</b> +61.8.8351.2188 +61.8.8351.2511 FAX	68-3198-50 Rev. A 11 17